




Whirlpool® 19 cu. ft. Bottom-Freezer Refrigerator with Freezer Drawer

WRB329RFBM

Available Finishes/Colours

	WRB329RFBM Monochromatic Stainless Steel
---	---

Dimensions

Depth	33 3/8
Height	67
Width	29 3/4

AHAM Volumes And Shelf Area

Freezer Volume (Cu Ft)	5.73
Refrigerator Volume (Cu Ft)	12.94

Controls

Control Type	Electronic
Automatic Defrost	Yes
Door Ajar/Open Alarm	No
LCD Touch Screen	No
Control Location	Interior Up Front
Water Filter Indicator/Reset	No

Exterior

Cabinet Color	Grey
Cabinet Finish	Textured
Door Color	Stainless Steel
Door Finish	Smooth
Door Opening	Right
Door Style	Flat
Handle Color	Stainless Steel
Handle Material	Metal
Hidden Hinge	No
Reversible Door	No

Misc.

Home Delivery	Yes
Will Call	Yes

Appearance

Cabinet Finish	Textured
----------------	----------

Storing all of your favorite fresh and frozen foods is easy with this 19 cu. ft. capacity bottom-freezer refrigerator featuring a convenient freezer drawer that places frozen items in close reach, making it easy to organize and find exactly what you need. You'll be able to keep food at the right temperature without wasting energy thanks to the Accu-Chill™ temperature management system, which uses built-in sensors to measure internal temperature and activates the compressor only when necessary. That food will look just as it should with energy-efficient LED lights, which cast a more natural light, while the FreshFlow™ produce preserver extends the freshness of produce for up to 4 days longer to keep fruits and vegetables tasting great.



Top Features

Accu-Chill™ Temperature Management System

SpillGuard™ Glass Shelves

Adaptive Defrost

Manuals & Literature:

 [Dimension Guide](#)  [Energy Guide](#)

 [Use and Care Guide](#)  [Warranty Information](#)

Whirlpool® Bottom Mount Refrigerator

PRODUCT MODEL NUMBERS

WRB322

WRB329

Electrical: A 115-volt, 60-Hz, AC-only, 15- or 20-amp fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your refrigerator be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.


NOTE: Before performing any type of installation, cleaning, or removing a light bulb, turn the control (Thermostat, Refrigerator or Freezer Control depending on the model) to OFF and then disconnect the refrigerator from the electrical source. When you are finished, reconnect the refrigerator to the electrical source and reset the control (Thermostat, Refrigerator or Freezer Control depending on the model) to the desired setting. See "Using the Controls."

Water: A cold water supply with water pressure between 35 and 120 psi (241 and 827 kPa) is required to operate ice maker and water dispenser. If you have questions about your water pressure, call a licensed, qualified plumber.

IMPORTANT: The pressure of the water coming out of a reverse osmosis system going to the water inlet valve of the refrigerator needs to be between 35 and 120 psi (241 and 827 kPa).


Reverse Osmosis Water Supply: If a reverse osmosis water filtration system is connected to your cold water supply, the water pressure to the reverse osmosis system needs to be a minimum of 40 to 60 psi (276 to 414 kPa).

PRODUCT DIMENSIONS

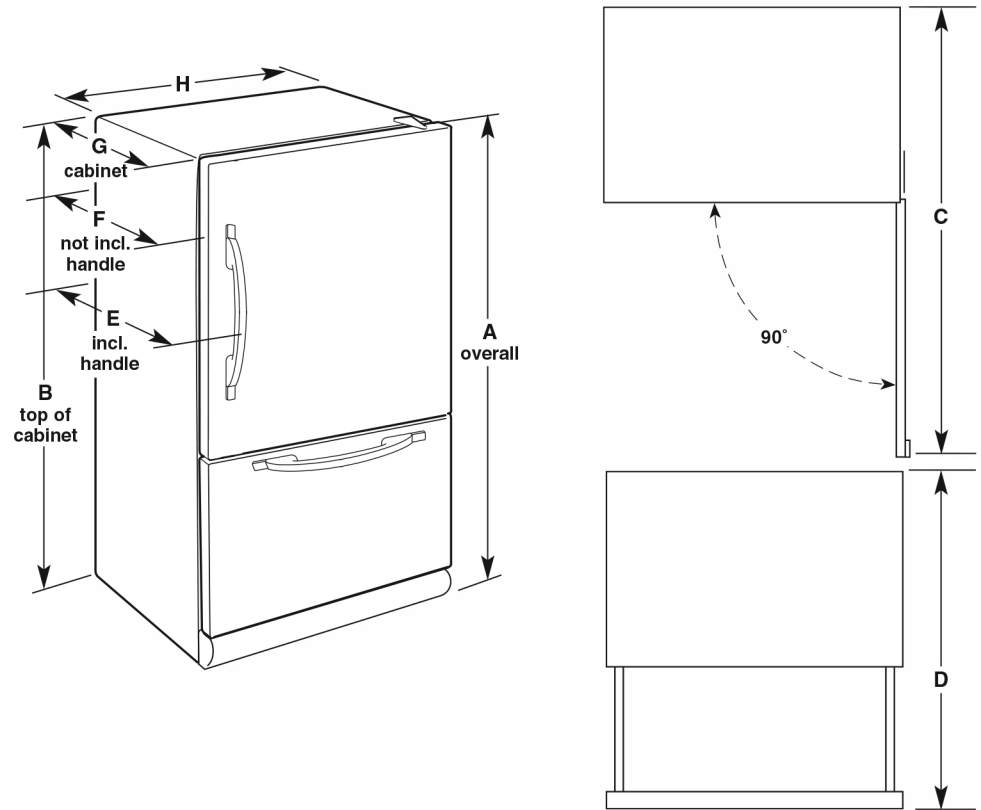

Model Number	Model Size	Height - Overall "A"	Height - Top of Cabinet "B"	Depth - Doors Open 90° "C"	Depth - Drawer Open "D"	Depth - With Handles "E"	Depth - Without Handles "F"	Depth - Cabinet Only "G"	Width - Cabinet "H"
WRB322	22.1 cu. ft.	70" (177.8 cm)	68½" (174 cm)	62" (157.5 cm)	50¾" (128.9 cm)	33¾" (84.8 cm)	30¾" (78.4 cm)	28½" (71.4 cm)	32¾" (82.9 cm)
WRB329	18.7 cu. ft.	67" (170.2 cm)	65½" (166.4 cm)	59" (149.9 cm)	50¾" (128.9 cm)	33¾" (84.8 cm)	30¾" (78.4 cm)	28½" (71.4 cm)	29¾" (75.2 cm)

LOCATION REQUIREMENTS

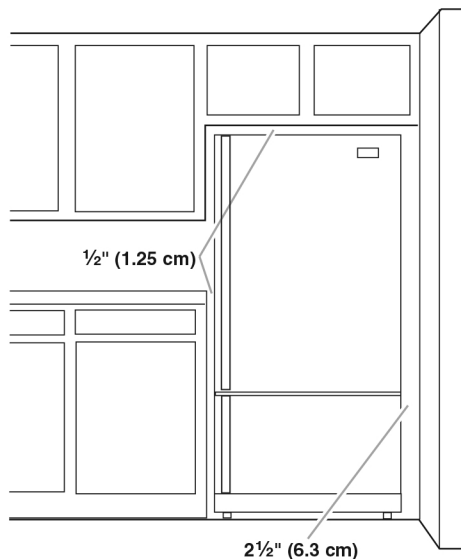

To ensure proper ventilation for your refrigerator, allow for a ½" (1.25 cm) space on each side and at the top. Allow at least 1" (2.54 cm) between back of cabinet and the wall. If your refrigerator has an ice maker, make sure you leave some extra space at the back for the water line connections.

If you are installing your refrigerator next to a fixed wall, leave ½" (6.3 cm) minimum on the hinge side (depending on your model) to allow for the door to swing open.

NOTE: This refrigerator is intended for use in a location where the temperature ranges from a minimum of 55°F (13°C) to a maximum of 110°F (43°C). The preferred room temperature range for optimum performance, which reduces electricity usage and provides superior cooling, is between 60°F (15°C) and 90°F (32°C). It is recommended that you do not install the refrigerator near a heat source, such as an oven or radiator.